

**SONY**

P/N 7819901876

**VRD-MC5**



**DVDirect™**

**Quick Start Guide**

© 2007 Sony Corporation Printed in China


# Dubbing From Your Handycam<sup>®</sup> With the DISC BURN Button

 
HDD Handycam

Memory Stick Handycam


Simply press the DISC BURN button on your Handycam to start copying the videos recorded since the last DISC BURN recording.


1

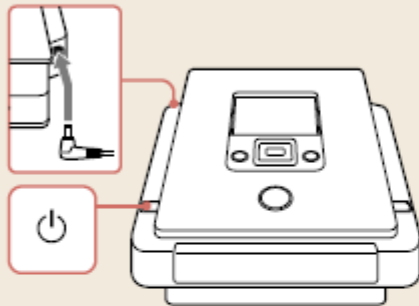


Connect the AC adapter and AC power cord, and press  to turn on the DVDDirect.

2

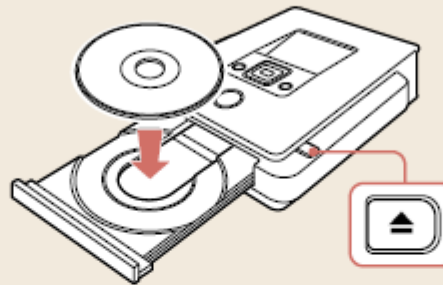


Press  and insert a disc.

3

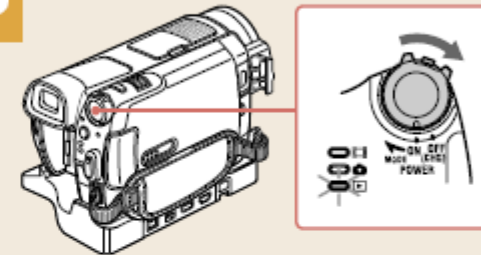


Turn on the camcorder.

4

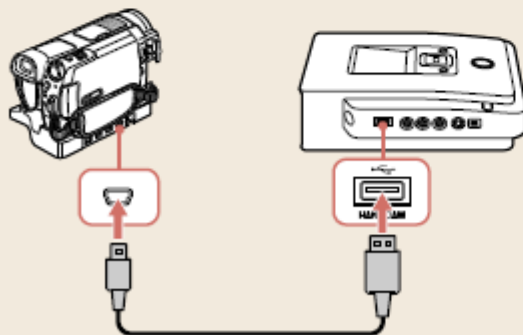


Connect the camcorder and DVDDirect with a USB cable (not supplied).

5

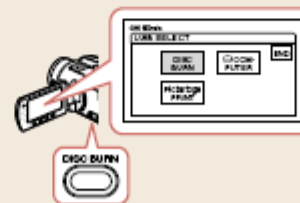

Press the DISC BURN button to start recording.

6

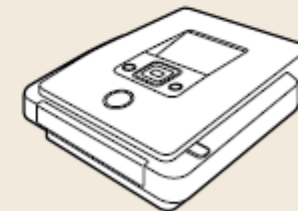

Wait for a while until dubbing is complete.


# Dubbing From Your Handycam®

HDD Handycam

 

DVD Handycam

Memory Stick Handycam


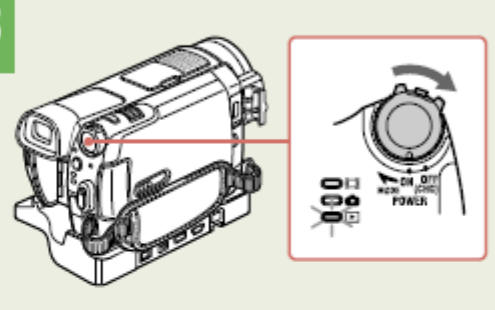
Copy the entire video contents of your Handycam onto DVDs.

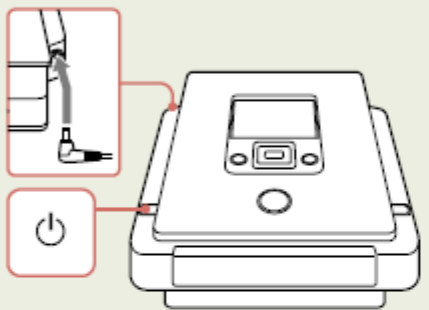- 


1

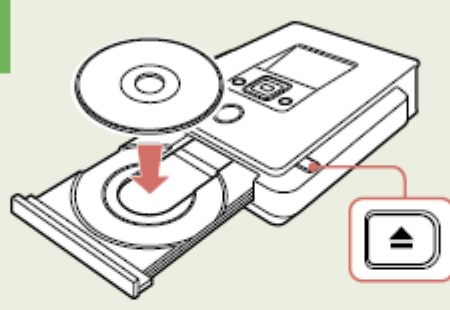Connect the AC adapter and AC power cord, and press  to turn on the DVDDirect.
- 

2


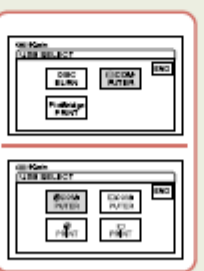
Press  and insert a disc.
- 

3

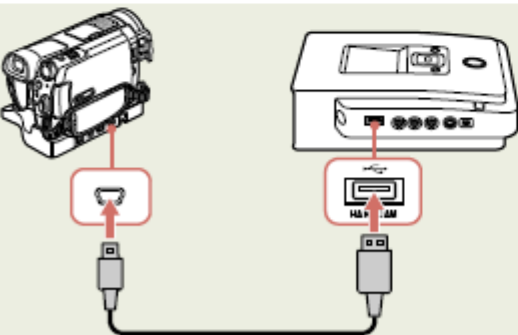
Turn on the camcorder.
- 

4


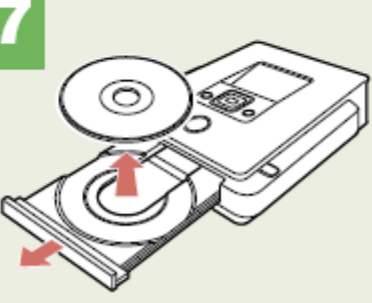
Connect the camcorder and DVDDirect with a USB cable (not supplied).

 Preparation for USB connection may differ depending on your camcorder. Refer to the operating instructions for your camcorder.
- 

5

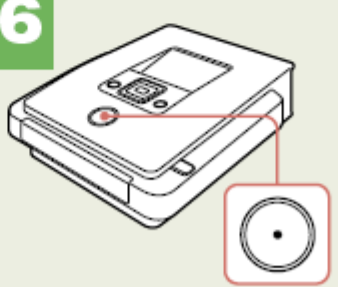On the camcorder's LCD screen, touch the button of the media you are dubbing from.
- 

6

Press  to start recording.
- 

7

When complete, the disc is ejected automatically.